



 
# LC VOICE J129 USER GUIDE

# J129 User Guide





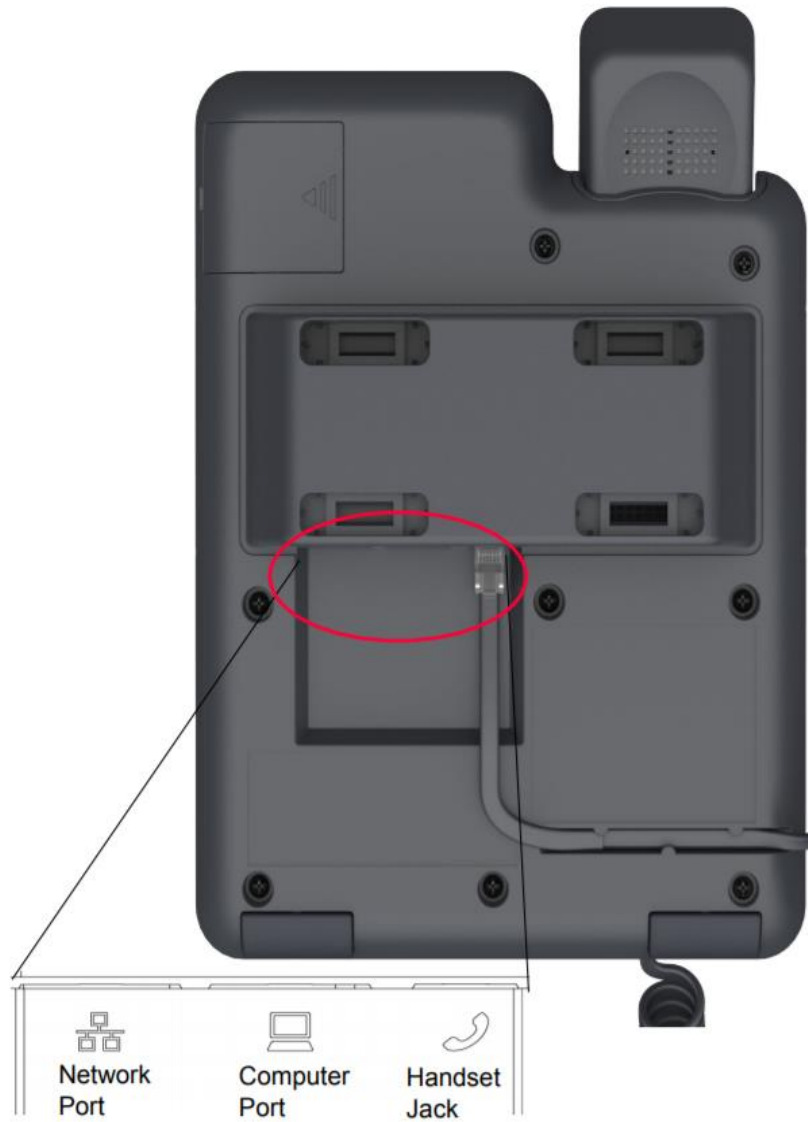


 



 

 





## J129 User Guide Description


Callout number	Name	Description
1	Beacon LED	Displays a flashing red light to indicate a voice mail or incoming call. The Beacon LED also flashes when you are on a call using the hands free speaker capability.
2	Phone display	Displays information such as time, softkey labels, and menu items.  If a text is wider than the display area, then the text is followed by three dots. Use the Right and Left Arrow keys to scroll through the text.  If there is a scroll bar or a line indicator at the right of the phone display, use the up and down arrow keys to scroll up and down.
3	Softkeys	Displays screen-specific commands.
4	OK	Selects the function assigned to the left softkey.
5	Navigation arrows	Navigates between various menu options.
6	Phone	Displays the Phone screen.
7	Back	Cancel the current action and returns to the previous menu.
8	Speaker	Activates and deactivates the speakerphone. You can also lift the handset to deactivate the speakerphone.
9	Main Menu	Displays the menu options and other phone settings.
10	Hold	Puts the call on hold.
11	Volume	Increases or decreases the volume of the handset, or speaker when you are on a call.  Adjusts the ringer volume when you are not on a call.
12	Mute	Mutes and unmutes the microphone.





RED is to the phone. BLUE is to the wall.

Icon	Description
	Line indicator; first call appearance
	Line indicator; second call appearance
	More than 10 recent missed calls
	Recents- Outgoing call
	Recents- Missed call
	Recents- Incoming call
	Outgoing recents MDA
	Missed call
	Check
	MDA active
	New call setup
	Voicemail
	Checkbox off
	Checkbox on
	Active conference
	Conference on hold
	Contrast
	EC500
	Failover
	Radio button off
	Radio button on
	Feature unavailable
	Call forward
	Handset
	Hold
	Phone lock
	Ringer on
	Ringer off
	Speaker

Icon	Description
	Do not disturb